

# CertiQ on Minetruck MT65

All available information for the specified machine types



## Operation

<b>Loading</b>
Total tonnes
Average tonnes per engine hour
Average tonnes per km hour
Average loaded travel distance
Number of boxes/buckets
Average buckets/boxes per engine hour
Average tonnes per bucket/box
Dump/load point*
Material*
<b>Utilization</b>
Utilization hours (machine off/idle/working)
Utilization %
Engine hours
Transmission hours
Delay/status code*
Operator ID*
Load cycle
<b>Fuel consumption</b>
Total liters
Liter per hour
Total CO <sub>2</sub> emission
Liters per tonne
<b>Location</b>
Site position

## Reports

<b>Excel reports</b>
Report subscription
<b>Notification</b>
Mail notification
SMS notification

## Administration (admins only)

<b>User settings</b>
Machine settings
Organization settings
Machine communication

## Maintenance

<b>Service</b>
No. of machines in overdue status
No. of reported services
Predicted date for next service
Hours to next service
Service lamp cleared on machine
<b>Diagnostic</b>
Active alarms
No. of alarms
Alarm type trending (engine/hydraulics/others)
Alarm frequency (Count and time for each type)
Acknowledge alarm
<b>Connectivity</b>
Last communication

## Available alarms

Engine oil pressure low critical
Engine air filter clogged warning
Engine intake air temperature high critical
Engine oil temperature high
Engine overspeed warning
Overspeed protection Step 3 warning
Engine coolant temp high critical
Engine coolant level low critical
Hydraulic oil temp high critical
Hydraulic oil level low warning
Hydraulic oil level low critical
Hydraulic oil filter clogged warning
Transmission oil filter clogged warning
Transmission oil temperature high critical
Transmission oil pressure low critical
Transmission oil level low warning
Lubrication level low warning
Brake fluid temperature high critical
Brake fluid filter clogged warning
Brake accumulator pressure low critical
Brake accumulator pressure low warning
Brake temperature high warning
Brake pressure high critical
Brake test needed warning
Brake test fail warning
High tire pressure critical
Tire sensor manually disabled (in gui) warning
Low tire pressure warning
Low tire pressure critical
High tire temperature warning
Tire sensor battery running low warning
Tire sensor faulty
Battery voltage low warning

\*Available with CertiQ onboard functionality.

(Some variations of supported alarms may exist due to model year and engine alternative)

**Epiroc Rock Drills AB**  
SE-701 91 Örebro, Sweden  
Phone no: +46 (0)10 7550 000  
Org no: 556077-9018

[epiroc.com](http://epiroc.com)

